


ATG SX-225-8 MEDIUM PRESSURE SYSTEM




SKU: SX-225-8 | **Categorías:** Equipo Analitico |

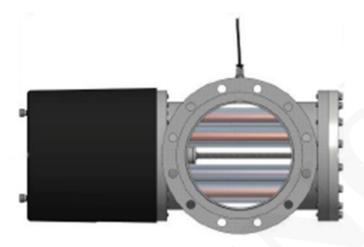

DESCRIPCIÓN DEL PRODUCTO

ATG SX-225-8 MEDIUM PRESSURE SYSTEM

Part Number: SX-225-8

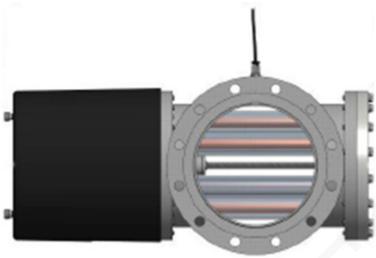

Especificaciones

Marca atg

Modelo SX 225 8

Tipo UV Chamber works with AT 487 and Spectra II control panel

Presión de trabajo bar 10

Material 316L Stainless Steel

Potencia kW 5.5

Temperatura máxima °C 45.0

Dimensiones / Pesos

Dimensiones L-818

Brida mm DN200

Brida pulgadas 8

Diámetro en pulgadas Ø7.9

Diámetro mm Ø200

Peso kg 110



UV SYSTEMS & PACKAGES



portfolio of standard products include Low Pressure UV system, Low Pressure Amalgam UV Systems, Medium Pressure UV Systems and Integrated UV Skid Packages and Containerised Solutions.

In addition atg UV Technology also have one of the largest selections of independently validated and type approved UV systems available in the UV market, including certifed performance for drinking water, swimming pools, wastewater, wastewater reuse and offshore oil and gas potable drinking water.

Features and Benefits

Situated in the electro- magnetic spectrum between X-rays and visible light, Ultraviolet (UV) light has many beneficial properties. UV light is split into four main categories, UV-A, UV-B, UV-C and Vacuum UV. The area between 240 and 280 nanometres (nm) is UV-C, commonly known as the germicidal region.



UV light is a physical, non-intrusive method of ensuring that organisms, which are airborne or present in most fluids, are unable to replicate

UV does not affect the taste, colour, or pH of the fluid being disinfected

Low Pressure Amalgam lamps offer unparalleled electrical efficiency

Medium pressure lamps offer the same disinfection properties as low pressure lamps at much greater levels

Typical Applications

For a number of applications, medium pressure lamps are incorporated due to their small footprint and short arc length, for example Retrofits into existing small footprint facilities. Our UV monitors can be offered as NIST traceable devices and fit into dry ports that permit reference monitors to be inserted without breaking a water seal to validate the lamp output. In all cases, the sensor technology we use is specific to germicidal UV and blind to visible light and IR.

Ver PDF



INFORMACIÓN ADICIONAL